

Sandra Levine Theatre Audio & Video Control via Touch Screen Panel

Wireless Mics 1-4 Volume & On/Off

Video Sound Level
(Video controls below)

Lobby Speakers
On/Off & Volume

Select "Presentation" to
control from touchscreen

Sound System Power
(no audio if this is off)

When unselected (gray), chime will
sound in these
areas when
chime button is
selected

Plays chime
sound
momentarily
to signal show
is about to
begin

Turn OFF
when
finished!

Sound console in the booth must be turned ON in order for wireless mics (UHF Mics) to work, even if the system mode is set to "Presentation". Mics will be controlled from touchscreen, but the console is used to feed the audio inputs into the system.

Switches the input being
sent to the projector

Switches the input being
sent to the TV monitor in
Piano Storage Room

Video
Sound Level

Controls DVD Player (rack
mounted in tech booth)

Lowers & Raises motorized
screen over stage
****Ensure no obstructions**
before lowering**
Raise UP when finished

Projector On/Off
(it takes a minute
to warm up)
Turn OFF when finished!